

INSTALLATION INSTRUCTIONS

#410 RADIUS ARM RESILIENT WASHER

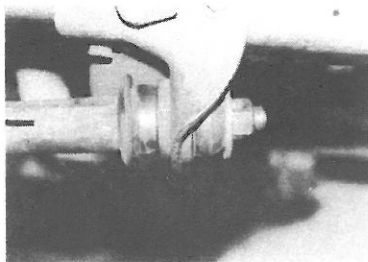


Fig. 1: Check bushing to make sure there is no excessive cracking or weather checking.

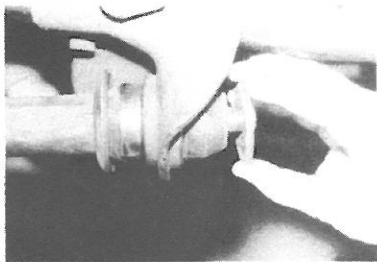


Fig. 2: Remove retaining nut and retaining washer.

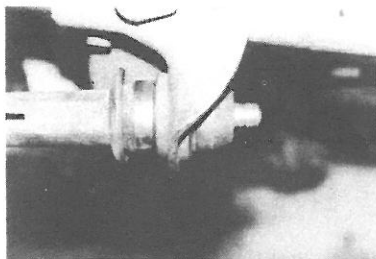


Fig. 3: Check bushings again for proper positioning in mounting bracket.

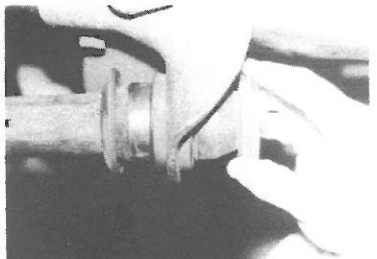


Fig. 4: Install Resilient washer and retaining washer. Be sure to keep the Resilient washer centered with the retaining washer.

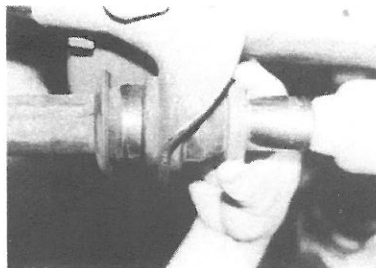


Fig. 5: Replace nut on radius arm shaft, tighten.

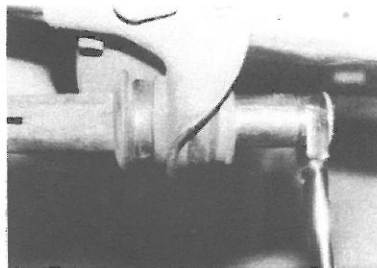


Fig. 6: Torque to manufacturer's specifications. (Notice difference in Bushing compression compared to Fig. 1.)