


Instructions

Wheel Spreader

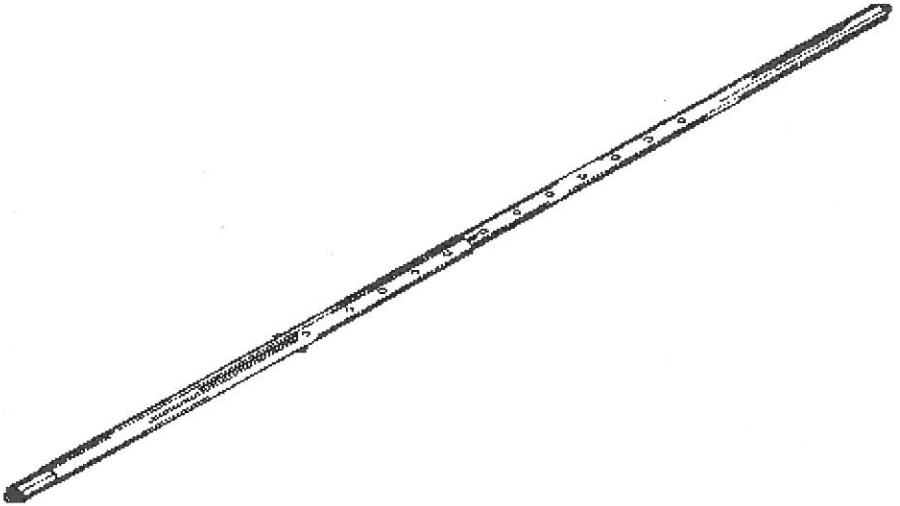

NOTE: BAR IS ADJUSTABLE MIN. 52 IN.(1.32M) MAX 72.13 IN.(1.83M)

Recommended for use with all TOE GAUGES that check TOE without moving the car. Adjust WHEEL SPREADER to distance between front tires, then elongate one more hole.

Compress spring and place WHEEL SPREADER between tires at front, as near spindle height as possible. Leave WHEEL SPREADER in this position while checking TOE. This puts the wheels in a position similar to a running condition on the road.