

## **Rear Toe Link Instructions**

1. Perform pre-alignment check in normal manner.
2. Install alignment equipment, record reading and determine amount of change needed.
3. Raise rear of vehicle and support in safe manner.
4. Remove rear tire.
5. Remove the inner toe link to frame nut.
6. Remove the bolt and discard the wheel to knuckle nut.
7. Separate toe link from knuckle using a tie rod end separator.
8. Install toe link to frame and tighten nut to manufactures specification.
9. Install new wheel to knuckle nut and torque nut to manufactures specification.
10. Re-install rear tire and torque lug nuts to manufactures specification.

## **Rear Toe Link Instructions**

1. Perform pre-alignment check in normal manner.
2. Install alignment equipment, record reading and determine amount of change needed.
3. Raise rear of vehicle and support in safe manner.
4. Remove rear tire.
5. Remove the inner toe link to frame nut.
6. Remove the bolt and discard the wheel to knuckle nut.
7. Separate toe link from knuckle using a tie rod end separator.
8. Install toe link to frame and tighten nut to manufactures specification.
9. Install new wheel to knuckle nut and torque nut to manufactures specification.
10. Re-install rear tire and torque lug nuts to manufactures specification.

## **Rear Toe Link Instructions**

1. Perform pre-alignment check in normal manner.
2. Install alignment equipment, record reading and determine amount of change needed.
3. Raise rear of vehicle and support in safe manner.
4. Remove rear tire.
5. Remove the inner toe link to frame nut.
6. Remove the bolt and discard the wheel to knuckle nut.
7. Separate toe link from knuckle using a tie rod end separator.
8. Install toe link to frame and tighten nut to manufactures specification.
9. Install new wheel to knuckle nut and torque nut to manufactures specification.
10. Re-install rear tire and torque lug nuts to manufactures specification.

