


Rear Camber Kit

Installation Instructions

1. Perform pre-alignment check in normal manner.
2. Install alignment equipment; record reading and determine amount of rear camber change needed.
3. Raise rear of vehicle by lower control arms and support in a safe manner.
4. Remove inboard bolt holding on upper control arm.
5. Install new adjustable cam bolt and guide system.
Note: There is a Left and Right-side kit.
6. Adjust camber to desired alignment reading.
When all adjustments are made tighten all bolts to manufacturer's specifications. (pump with grease after install)
7. Lower vehicle and proceed with alignment and road test vehicle.

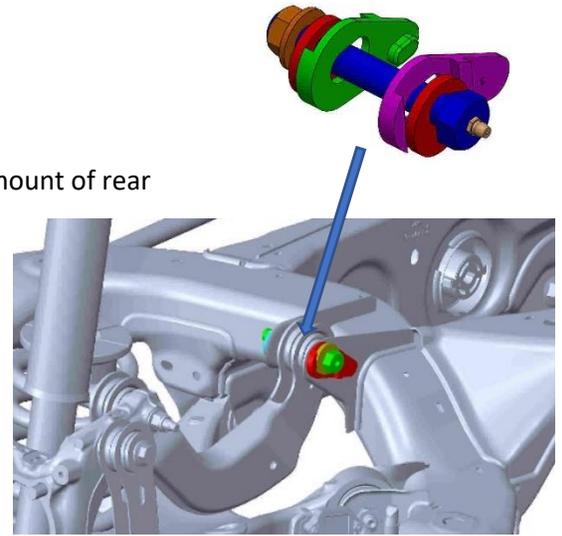

95-317-0320