

Installation Instruction



Universal Inner Tie Rod Socket

"Positive Lock"

1. Remove outer tie rod end and inner tie rod dust boot. (Fig. 1)
2. Install positive lock socket over inner tie rod end. Line up one of the two locking bolts.
3. Use a 3/16" allen wrench to lock the socket into place. (Fig. 2)

Note make sure the jam nut is loose:

4. Use a 9/16" wrench to tighten the jam nut. (Fig. 3)
5. Use a breaker bar with a 3/8 extension to turn, and loosen the inner tie rod end. (Fig 4. & Fig. 5)

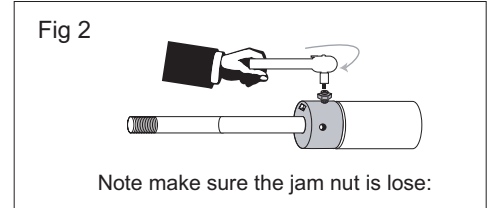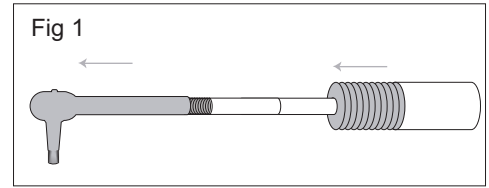

Note make sure the jam nut is loose:

